
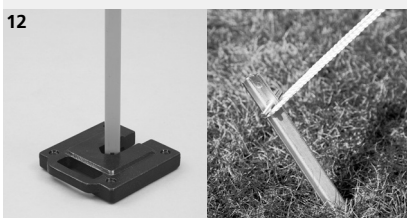
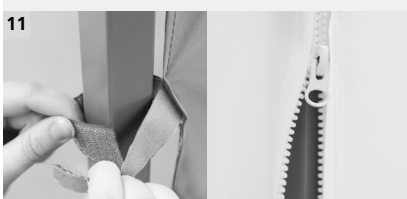
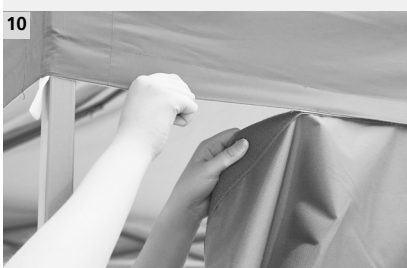


## Faltzelt/ Faltpavillon Compact 2,5x2,5m · 3x3m

## Pop Up Tent/ Gazebo Compact 2.5x2.5m · 3x3m

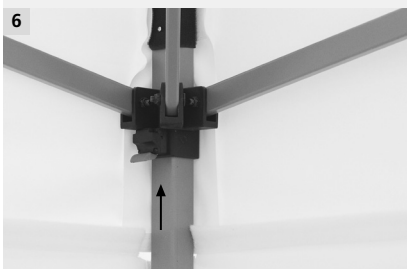

### AUFBAU

Der Aufbau mit mind. 2 Personen wird empfohlen.

- 1 Entpacken Sie das Gestell und stellen Sie es aufrecht hin.
- 2 Ziehen Sie das Aluminiumgestell gleichmäßig etwas auseinander.
- 3 Legen Sie das Zeltdach über das Gestell (die Ecken des Daches müssen auf den Ecken des Gestells liegen).
- 4 Um das Dach zu fixieren, befestigen Sie das an den Ecken des Zeltdaches angebrachte Flauschband am Klettband des Gestells.
- 5 Ziehen Sie das Gestell auseinander, bis das Gestänge einrastet (ggf. leicht anheben).
- 6 Vergewissern Sie sich, dass die Sicherungsbolzen wirklich eingerastet sind, schieben Sie ggf. das Gestell leicht nach oben, bis die Ecke einrastet.
- 7 Ziehen Sie die Standbeine in die gewünschte Höhe nach unten aus, bis diese ebenfalls einrasten (bei Faltzelt Compact bitte Rastenstellung 4 verwenden).
- 8 **Der Faltpavillon Compact ist nun aufgebaut und einsatzbereit.**

### MONTAGE DER ZELTWÄNDE

- 9 Die Standfüße bitte auf eine Durchgangshöhe von 1,97m ausziehen (Rastenstellung 4).
- 10 Die Zeltwände mittels des Klettbandes an einer Ecke beginnend an der Unterkante des Zeltdaches befestigen.
- 11 Klettschlaufen um die Standbeine legen. Bei Verwendung von Zeltwänden mit Reißverschlüssen, die Zeltwände über die Außenseiten der Standbeine miteinander verbinden.
- 12 **Achtung: Beim Einsatz im Außenbereich müssen Faltzelte und Faltpavillons immer sicher am Boden verankert werden. Nutzen Sie zur Abspannung des Daches zwingend die zusätzlich lieferbaren Abspann-Sets sowie die stapelbaren Beschwerungsplatten, -gewichte und Erdhaken zur Stabilisierung der Zeltpfosten. Für den Langzeiteinsatz und den langzeitigen unbeaufsichtigten Einsatz im Außenbereich sind Faltzelte und Faltpavillons nicht geeignet.**

### ABBAU

- 13 ggf. Zeltwände abnehmen (in optionaler Transporttasche verstauen), rote Verstellhebel drücken, Standfüße nach unten einschieben
- 14 rote Sicherungsbolzen am Dachgestell betätigen, schnappt leicht nach unten (Pfosten nicht direkt darunter berühren)
- 15 Dachbespannung abnehmen, in optionaler Transporttasche verstauen
- 16 Gestell zusammenschieben, in optionaler Trolleytasche verstauen

**Hinweis:** Das Zeltgestell muss sich leicht und ohne Kraftaufwendung entfalten lassen. Druckteile ohne Laminierung müssen besonders sorgfältig behandelt werden, um Kratzspuren zu vermeiden. Schleifen Sie die Druckteile niemals am Boden.

Die Lagerung darf nur im trockenen Zustand erfolgen. Faltpavillons und Faltzelte Compact sollten aufrecht stehend gelagert werden. Für den Transport und die Lagerung von Faltzelten Compact müssen die Zeltdächer und Zeltwände vom Gestell abgenommen werden.

### ASSEMBLY INSTRUCTIONS

We recommend using two people during the assembly process.

- 1 Unpack the frame and place it upright.
- 2 Extend the aluminium frame slightly.
- 3 Put the tent roof over the frame. The corners of the roof must be parallel to the edges of the frame.
- 4 To fix the roof, attach loop tape (in the corners of the tent roof) to the Velcro of the frame.
- 5 Pull apart the frame until the rods click into place (you may need to lift up the frame slightly).
- 6 Make sure that the safety pins have locked. If necessary, lift up the frame a little until the corners snap.
- 7 Pull out the legs as high as desired until they are also locked into place (for tents with tent walls please use lock position 4).
- 8 **The Gazebo Compact is ready for use.**

### ASSEMBLY OF TENT WALLS

- 9 Please pull out the legs for an overhead clearance of 1.97m (lock position 4).
- 10 Attach the tent walls with the Velcro to the bottom edge of the roof (starting in the corner).
- 11 Put the Velcro straps around the legs. When ordering side walls with zipper, join them over the outside of the legs.
- 12 **Attention: For every outdoor application, folding tents and folding pavilions must always be anchored to the ground. For roof anchoring and stretching it is absolutely essential to use optionally available guy sets as well as stackable weighting plates, weights and ground hooks to stabilize the tent posts. Pop Up Tents and Gazebos are not suitable for long-term and unattended outdoor use.**

### DISMOUNTING

- 13 If existing, remove tent walls (store in optionally available transport bag), push the red adjustment lever and slide in the legs
- 14 Press the red safety pins in the edges of the roof (Please note: the frame skips downward quite easily, please be careful when handling the poles to avoid injuries)
- 15 Remove the roof covering, store in the optionally available transport bag
- 16 Push together the rack, store in optionally available trolley bag

**Warning:** To avoid mechanical damage, do not use force during assembly. Please note that prints without additional coating may be susceptible to scratching when not properly cared for. Prints should never be dragged along the ground.

Prints must be completely dried and removed from frame before storing away. Gazebo Compact and Pop Up Tent Compact should always stand upright when stored. For transport and storage of folding tents, the tent roofs must always be removed from the frame.